

# Cutting Tools Catalog



**Cordless Reciprocating  
Insulation Saw**



**Insulation Hand Knife**  
Size: 280mm



**Insulation Hand Knife**  
Size: 420mm



**RAPIDCUT AC Adapter (for  
RC02 Foam Cutter)**



 
**RAPIDCUT Battery (for RC02  
Foam Cutter)**



**RAPIDCUT Battery Charger  
Dock (for CB Series Fabric  
Cutters)**



**RAPIDCUT Battery Charger  
Dock (for RC02 Foam Cutter)**



**RAPIDCUT Battery Charger  
Dock (for XG04 Cordless  
Scissors)**



**RAPIDCUT Cordless Electric  
Scissors XG-04**

# Cutting Tools Catalog



**RAPIDCUT Cordless Fabric Rotary Cutter CB-70**



**RAPIDCUT Cordless Foam Rubber Cutter (Dual Blades) RC02**  
Height: 200mm



**RAPIDCUT Cordless Foam Rubber Cutter (Dual Blades) RC02**  
Height: 300mm



**RAPIDCUT Cordless Industrial Round Knife Fabric Cutting Machine CB-100**



**RAPIDCUT Cordless Industrial Round Knife Fabric Cutting Machine CB-125**



**RAPIDCUT Foam Rubber Cutter Rail - Long Guide**



**RAPIDCUT Foam Rubber Cutter Rail - Short Guide**



**RAPIDCUT Guider Column (for RC02 Foam Cutter)**  
Height: 300mm



**RAPIDCUT Guider Column (for RC02 Foam Cutter)**  
Height: 200mm

# Cutting Tools Catalog



**RAPIDCUT Replacement Base Plate (for RC02 Foam Cutter)**



**RAPIDCUT Replacement Battery (for CB Series Rotary Cutters)**



**RAPIDCUT Replacement Battery (for XG04 Cordless Scissors)**



**RAPIDCUT Replacement Blade (for CB-100 Rotary Cutter)**



**RAPIDCUT Replacement Blade (for CB-125 Rotary Cutter)**



**RAPIDCUT Replacement Blade (for CB-70 Rotary Cutter)**



**RAPIDCUT Replacement Blades (for RC02 Foam Cutter)**  
Height: 200mm, Type: LEFT BLADE



**RAPIDCUT Replacement Blades (for RC02 Foam Cutter)**  
Height: 300mm, Type: LEFT BLADE



**RAPIDCUT Replacement Blades (for RC02 Foam Cutter)**  
Height: 200mm, Type: RIGHT BLADE


# Cutting Tools Catalog




**RIGHT BLADE**  
Left Facing

**RAPIDCUT Replacement  
Blades (for RC02 Foam  
Cutter)**

Height: 300mm, Type: RIGHT BLADE



**RAPIDCUT Replacement  
Charging Cable (for XG04  
Cordless Scissors)**



**D-Blade for Rigid Materials**  
eg cardboard, plastic sheets,  
aluminium sheets

**RAPIDCUT XG04 D-Blades  
RIGID (#004)**



**O-Blade for Soft Materials**  
eg fabric, felt, vinyl, leather,  
karate canvas, carpet

**RAPIDCUT XG04 O-Blades  
SOFT (#003)**